



Dino Paoli s.r.l. - Via G. Dorso, 5 - 42100 Reggio nell'Emilia (RE) - ITALY
 Tel.: +39.0522.364.511 / 300.828 - Fax: +39.0522.304.864
 E-mail: info@dinopaoli.com - Website: www.dinopaoli.com

DP 218 GREASE

- | | | | |
|---|-----------------------------------|-----------------------|--|
| 1 Hammer Case Lock Washer | 15 Roller | 30 Housing Cover | 45 Trigger Pin |
| 2 Hammer Case Cap Screw | 16 Pin Roller | 31 Rear Rotor Bearing | 46 Trigger |
| 3 Hammer Case | 17 Clutch Housing Bearing | 32 Rear End Plate | 47 Rotation Reverser Pin |
| 4 Hammer Case Oil Seal | 18 Hammer Case Gasket | 33 Vane | 48 Rotation Reverser Spring |
| 5 Combined Bearing | 19 Rotation Reverse Shaft Seal | 34 Rotor | 49 Rotation Reverser Grub Screw |
| 6 Hammer Case Bushing | 20 Rotation Reverse Shaft | 35 Motor Housing | 50 3/4" Socket Retainer O-ring |
| 7 3/4" Socket Retainer | 21 Rotation Reverse Shaft Bushing | 36 Silencer | A Whole Motor Housing (19÷21;35;37÷49) |
| 8 Standard Anvil Shank (3/4"sq. drive) | 22 Front Rotor Bearing | 37 Anchor Pin Circlip | B Whole Hammer Case with Bearing (3;4;5) |
| 8L Extended Anvil Shank (3/4"sq. drive) | 23 Front End Plate | 38 Air Filter | C Whole Hammer Case with Bushing (3;4;6) |
| 9 Clutch Shaft | 24 Front Cylinder Dowel | 39 Valve Spring | D Front End Plate + Bearing (22;23) |
| 10 Clutch Spring | 25 Cylinder | 40 Stainless Ball | E Rear End Plate + Bearing (31;32) |
| 11 Clutch Plate | 26 Rear Cylinder Dowel | 41 Valve Seat | F Air Inlet Valve (37÷42) |
| 12 Clutch Cam | 27 Housing Cover Gasket | 42 Air Inlet Reducer | G Anvil Shank +Ring +O-ring (7;8/8L;50) |
| 13 Clutch Housing Bushing | 28 Housing Cover Screw | 43 Valve Pin | |
| 14 Clutch Housing | 29 Housing Cover Lock Washer | 44 Valve Pin Bushing | |