


# DP 32 SS

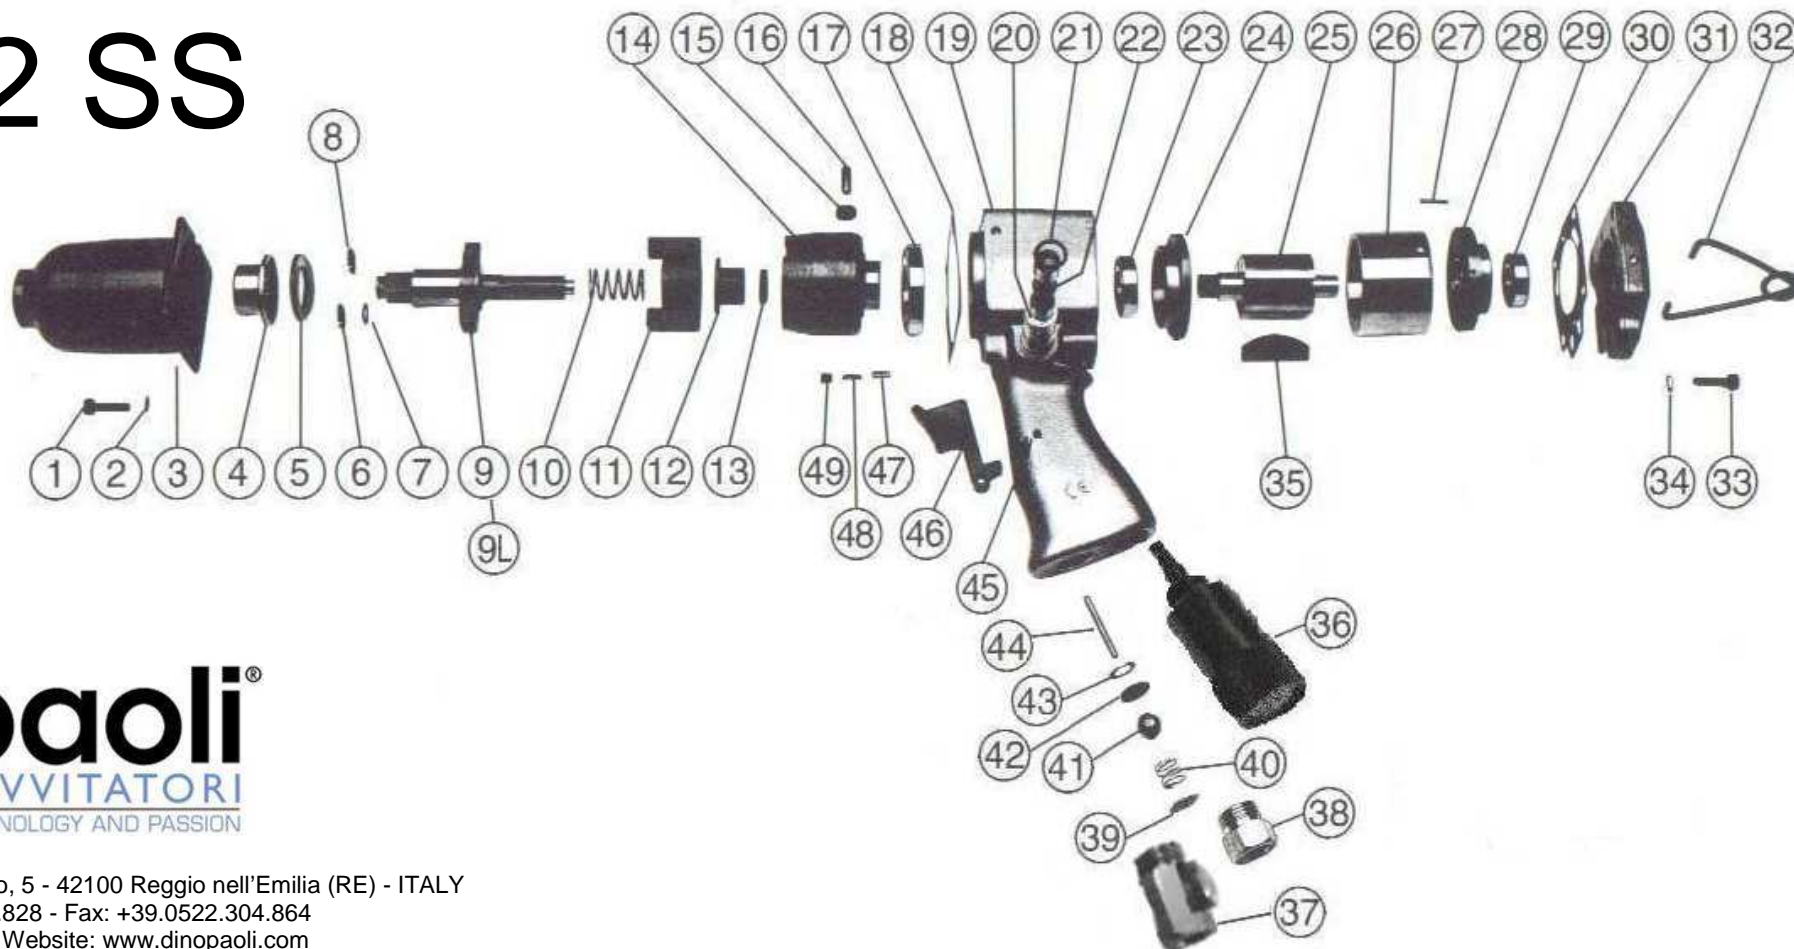

Dino Paoli s.r.l. - Via G. Dorso, 5 - 42100 Reggio nell'Emilia (RE) - ITALY  
 Tel.: +39.0522.364.511 / 300.828 - Fax: +39.0522.304.864  
 E-mail: [info@dinopaoli.com](mailto:info@dinopaoli.com) - Website: [www.dinopaoli.com](http://www.dinopaoli.com)

1	Hammer Case Cap Screw	15	Roller	30	Housing Cover Gasket	45	Trigger Pin
2	Hammer Case Lock Washer	16	Pin Roller	31	Housing Cover	46	Trigger
3	Hammer Case	17	Clutch Housing Bearing	32	Hanger	47	Rotation Reverser Pin
4	Combined Bearing	18	Hammer Case Gasket	33	Housing Cover Screw	48	Rotation Reverser Spring
5	Thrust Plate	19	Motor Housing	34	Housing Cover Lock Washer	49	Rotation Reverser Grub Screw
6	½" Socket Retaining Ring	20	Rotation Reverse Shaft Bushing	35	Vane	A	Whole Motor Housing (19+22;38+49)
7	½" Socket Retainer O-ring	21	Rotation Reverse Shaft Seal	36	Special Silencer	B	Whole Motor Housing + Reg.(19+22;37;39+49)
8	½" Socket Retainer (alternative 6;7)	22	Rotation Reverse Shaft	37	Air Inlet Reducer with Regulator	C	Whole Hammer Case (3;4)
9	Standard Anvil Shank (½"sq. drive)	23	Front Rotor Bearing	38	Air Inlet Reducer	D	Front End Plate + Bearing (23;24)
9L	Extended Anvil Shank (½"sq. drive)	24	Front End Plate	39	Air Filter	E	Rear End Plate + Bearing (28;29)
10	Clutch Spring	25	Rotor	40	Valve Spring	F	Anvil Shank +Ring +O-ring (6;7;9/9L)
11	Clutch Plate	26	Cylinder	41	Stainless Ball	G	Anvil Shank +Ring (8;9/9L)
12	Clutch Cam	27	Cylinder Dowel	42	Valve Seat		
13	Clutch Housing Bushing	28	Rear End Plate	43	Valve Seat Support		
14	Clutch Housing	29	Rear Rotor Bearing	44	Valve Pin		