


DP 30 SS

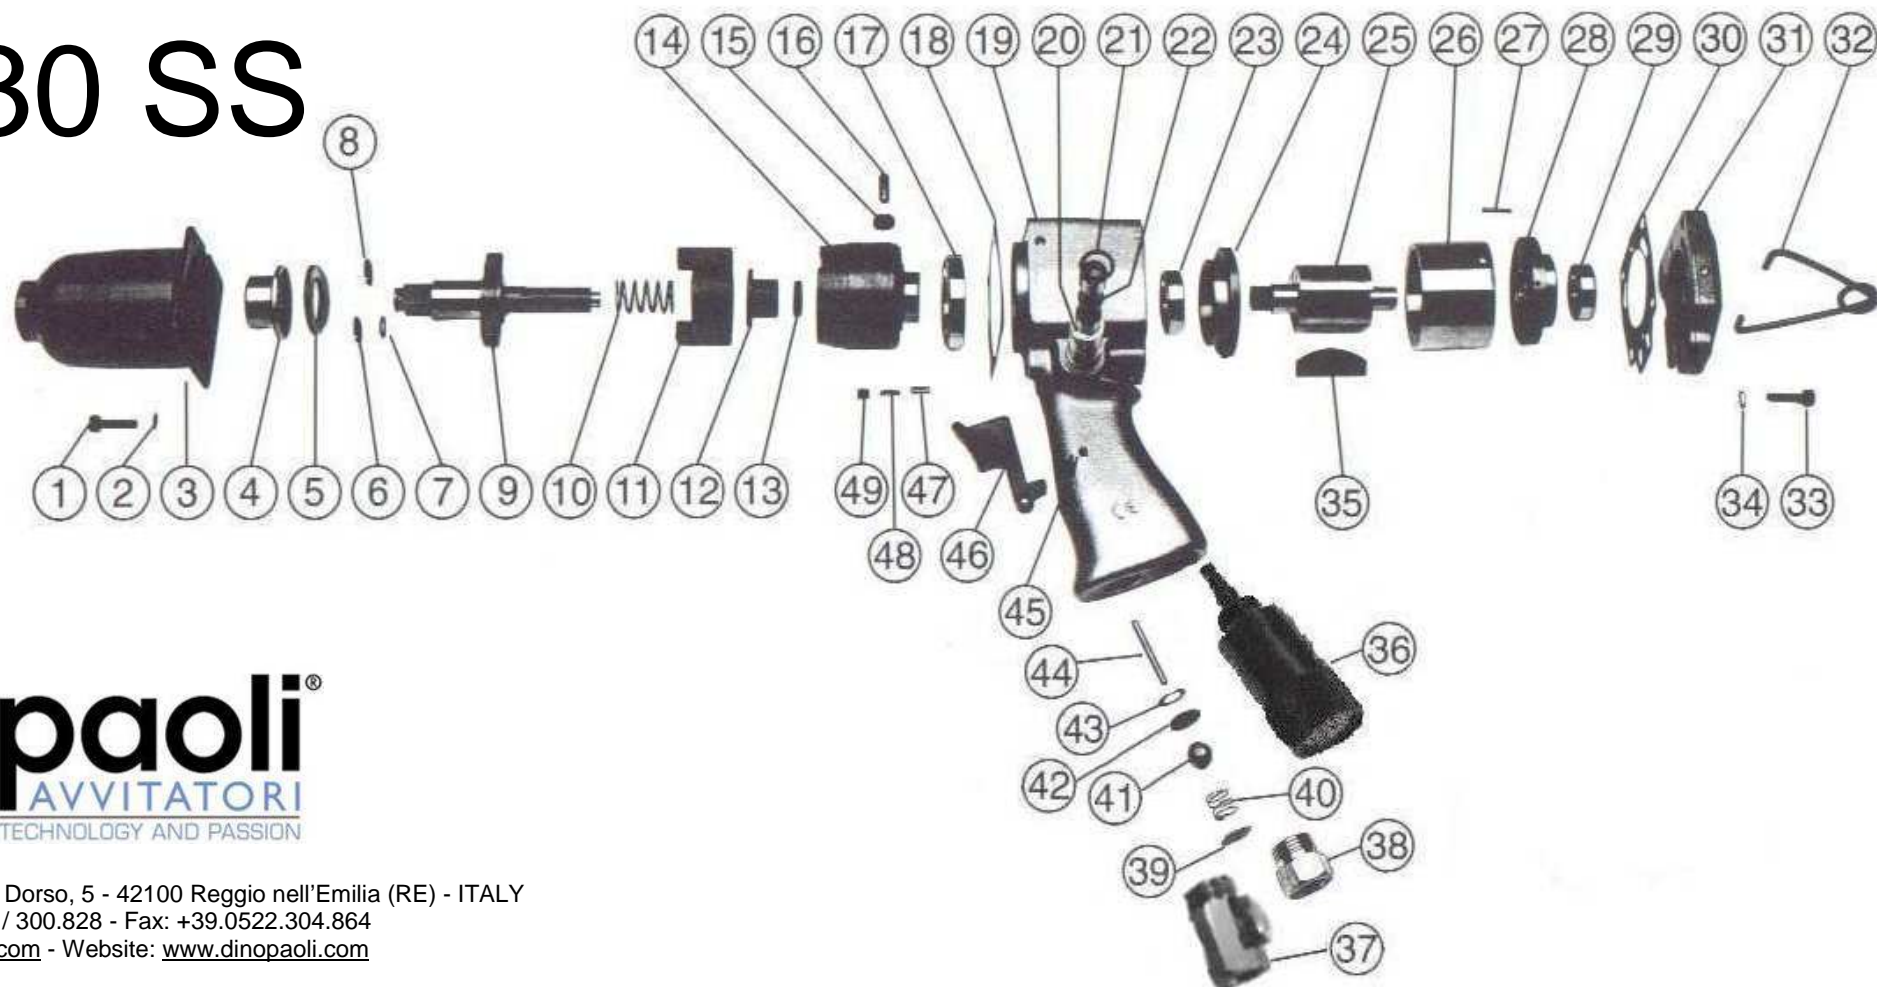

Dino Paoli s.r.l. - Via G. Dorso, 5 - 42100 Reggio nell'Emilia (RE) - ITALY
 Tel.: +39.0522.364.511 / 300.828 - Fax: +39.0522.304.864
 E-mail: info@dinopaoli.com - Website: www.dinopaoli.com

- | | | | |
|--|-----------------------------------|-------------------------------------|--|
| 1 Hammer Case Cap Screw | 15 Roller | 29 Rear Rotor Bearing | 43 Valve Seat Support |
| 2 Hammer Case Lock Washer | 16 Pin Roller | 30 Housing Cover Gasket | 44 Valve Pin |
| 3 Hammer Case | 17 Clutch Housing Bearing | 31 Housing Cover | 45 Trigger Pin |
| 4 Combined Bearing | 18 Hammer Case Gasket | 32 Hanger | 46 Trigger |
| 5 Thrust Plate | 19 Motor Housing | 33 Housing Cover Screw | 47 Rotation Reverser Pin |
| 6 ½" Socket Retaining Ring | 20 Rotation Reverse Shaft Bushing | 34 Housing Cover Lock Washer | 48 Rotation Reverser Spring |
| 7 ½" Socket Retainer O-ring | 21 Rotation Reverse Shaft Seal | 35 Vane | 49 Rotation Reverser Grub Screw |
| 8 ½" Socket Retainer (alternative 6;7) | 22 Rotation Reverse Shaft | 36 Special Silencer | A Whole Motor Housing (19÷22;38÷49) |
| 9 Anvil Shank (½" square drive) | 23 Front Rotor Bearing | 37 Air Inlet Reducer with Regulator | B Whole Motor Housing +Reg. (19÷22;37;39÷49) |
| 10 Clutch Spring | 24 Front End Plate | 38 Air Inlet Reducer | C Whole Hammer Case (3;4) |
| 11 Clutch Plate | 25 Rotor | 39 Air Filter | D Front End Plate + Bearing (23;24) |
| 12 Clutch Cam | 26 Cylinder | 40 Valve Spring | E Rear End Plate + Bearing (28;29) |
| 13 Clutch Housing Bushing | 27 Cylinder Dowel | 41 Stainless Ball | F Anvil Shank +Ring +O-ring (6;7;9) |
| 14 Clutch Housing | 28 Rear End Plate | 42 Valve Seat | G Anvil Shank +Ring (8;9) |